



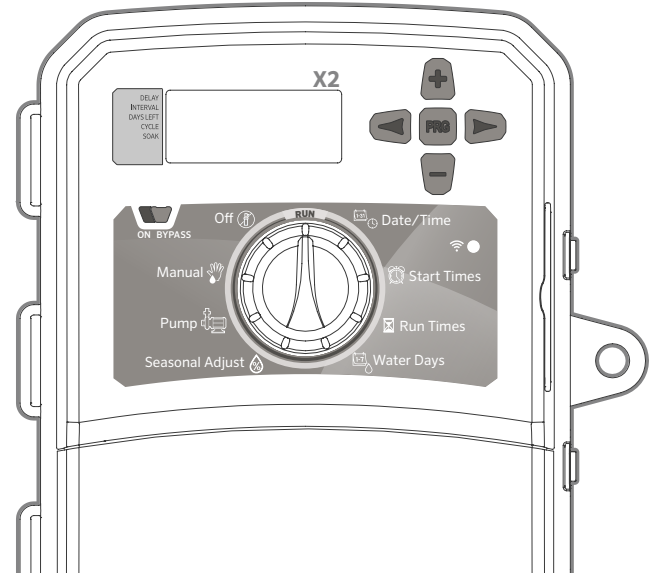



X2

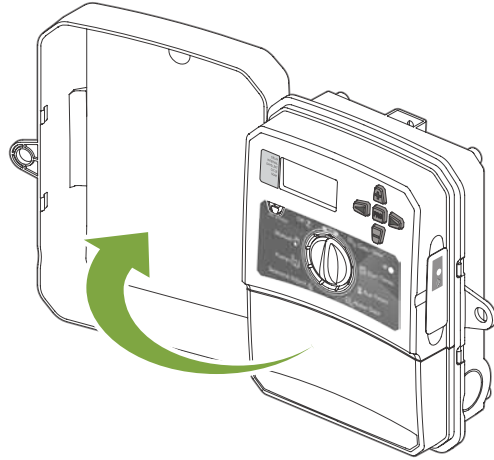

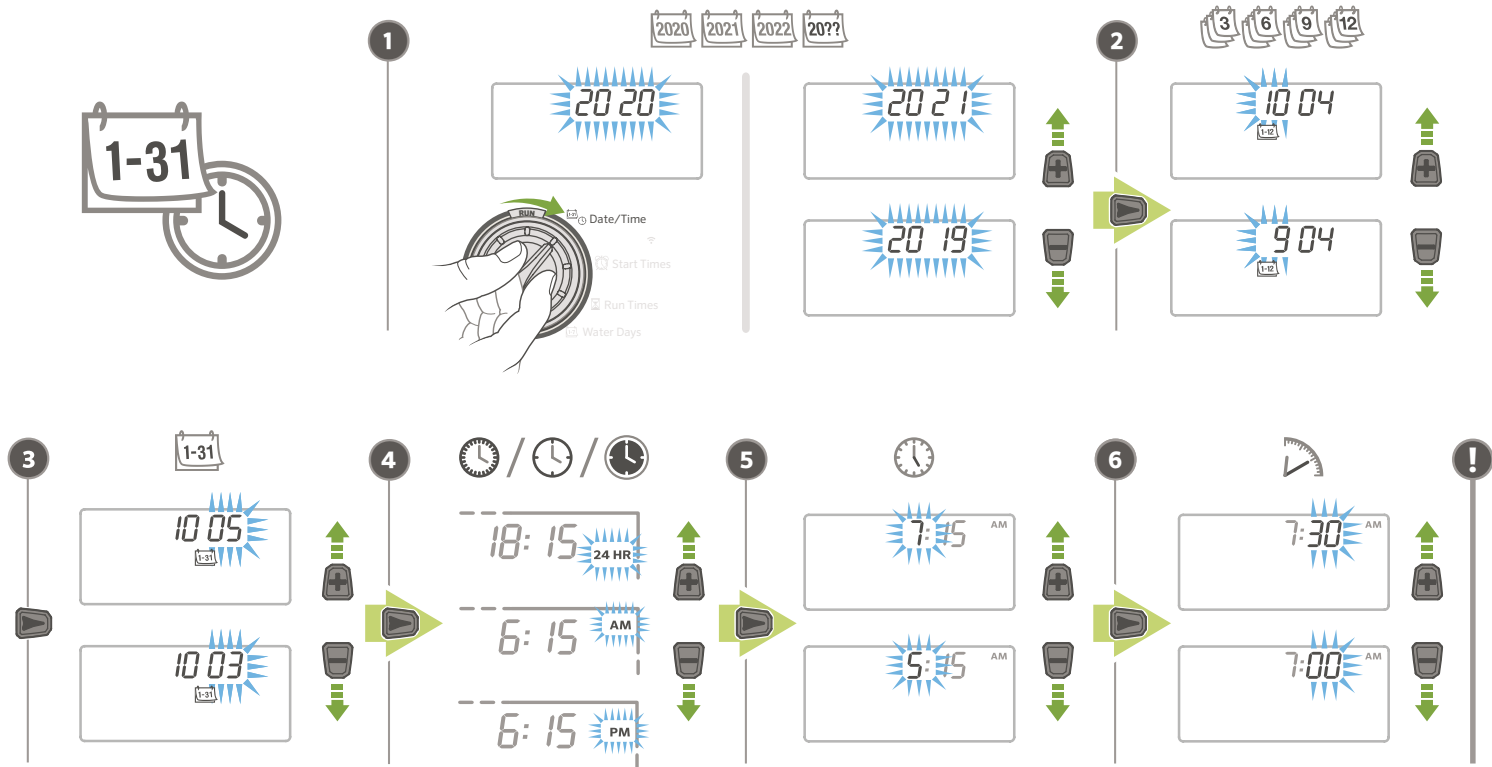






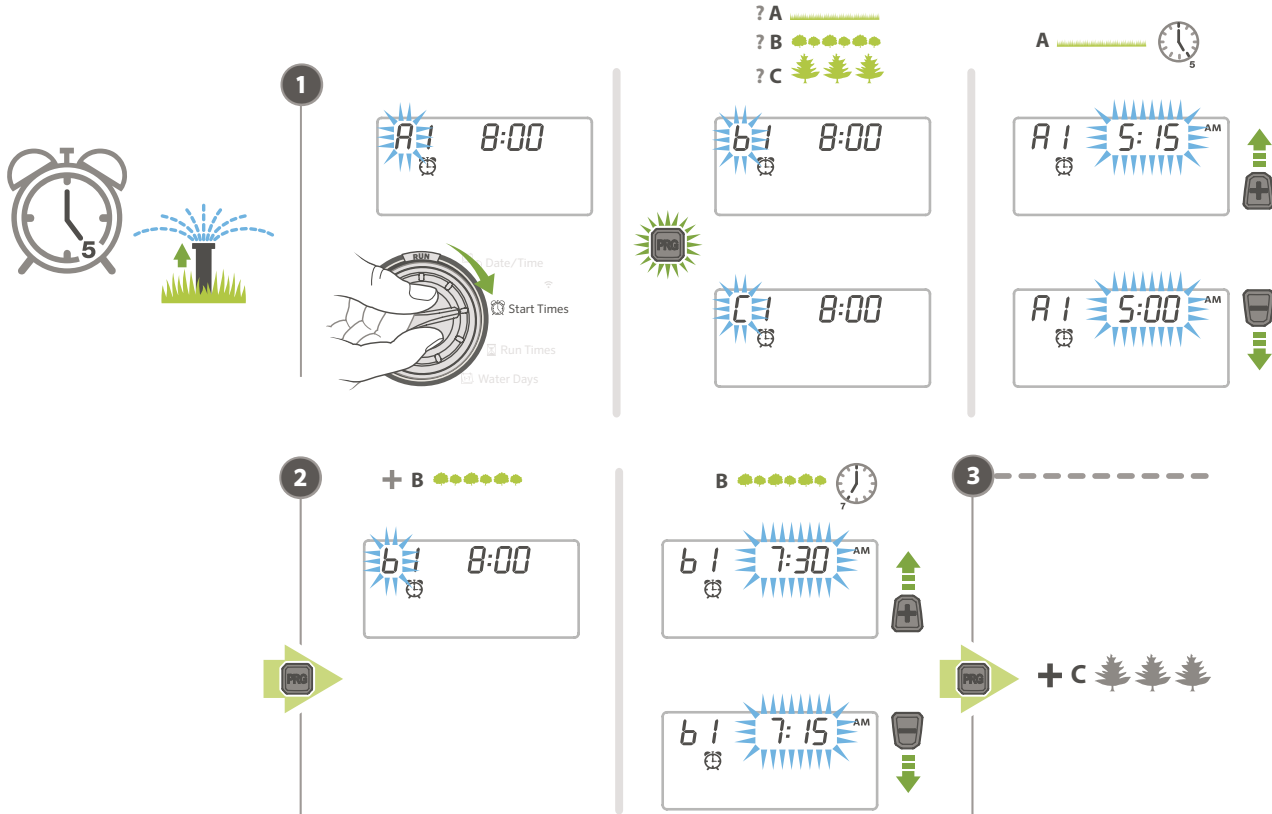



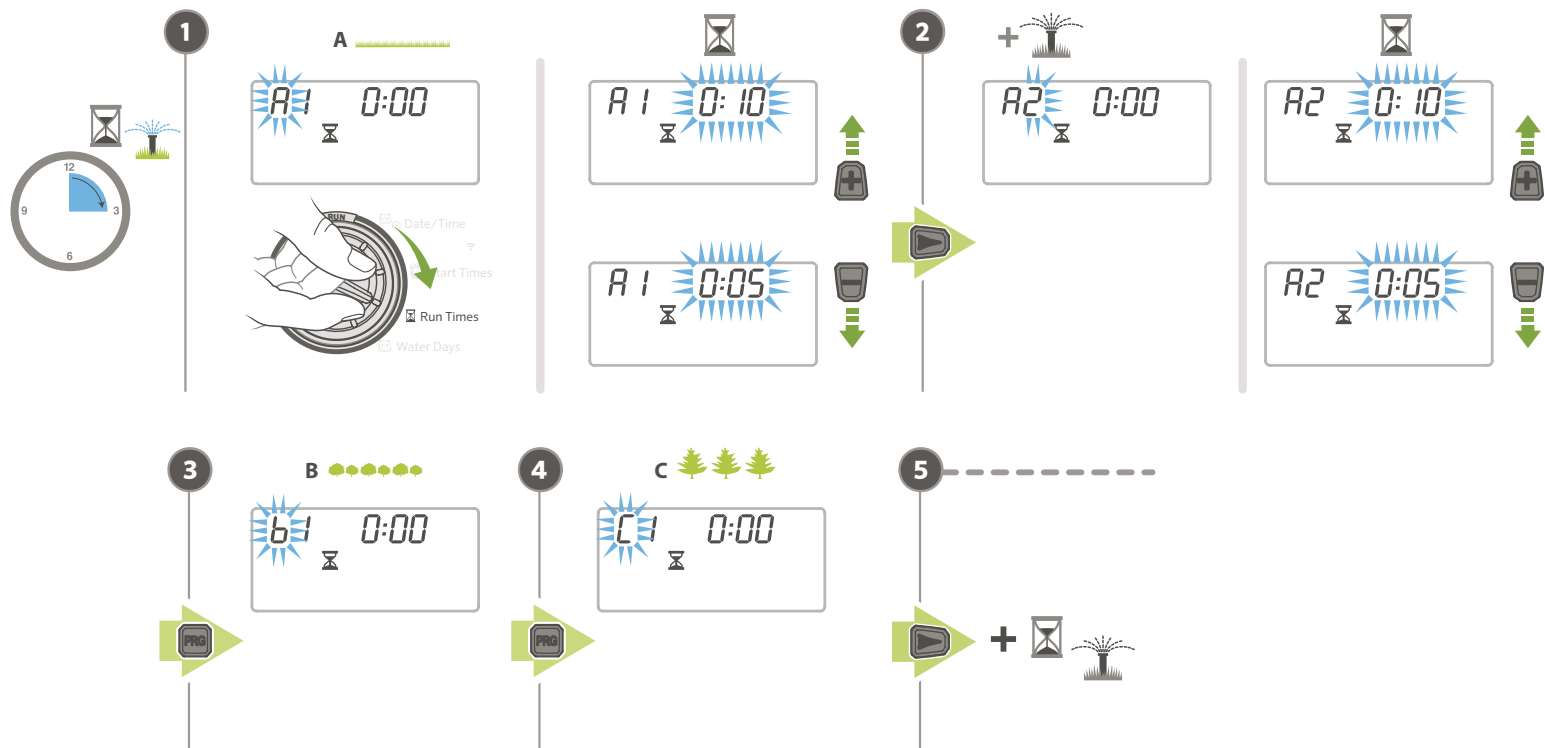


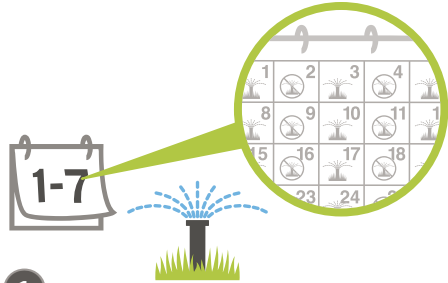


1

   - ? A
- ? B
- ? C

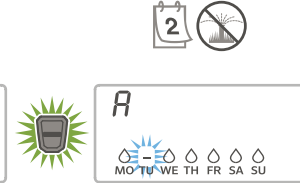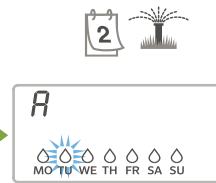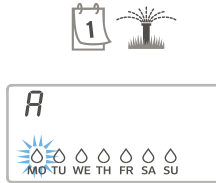


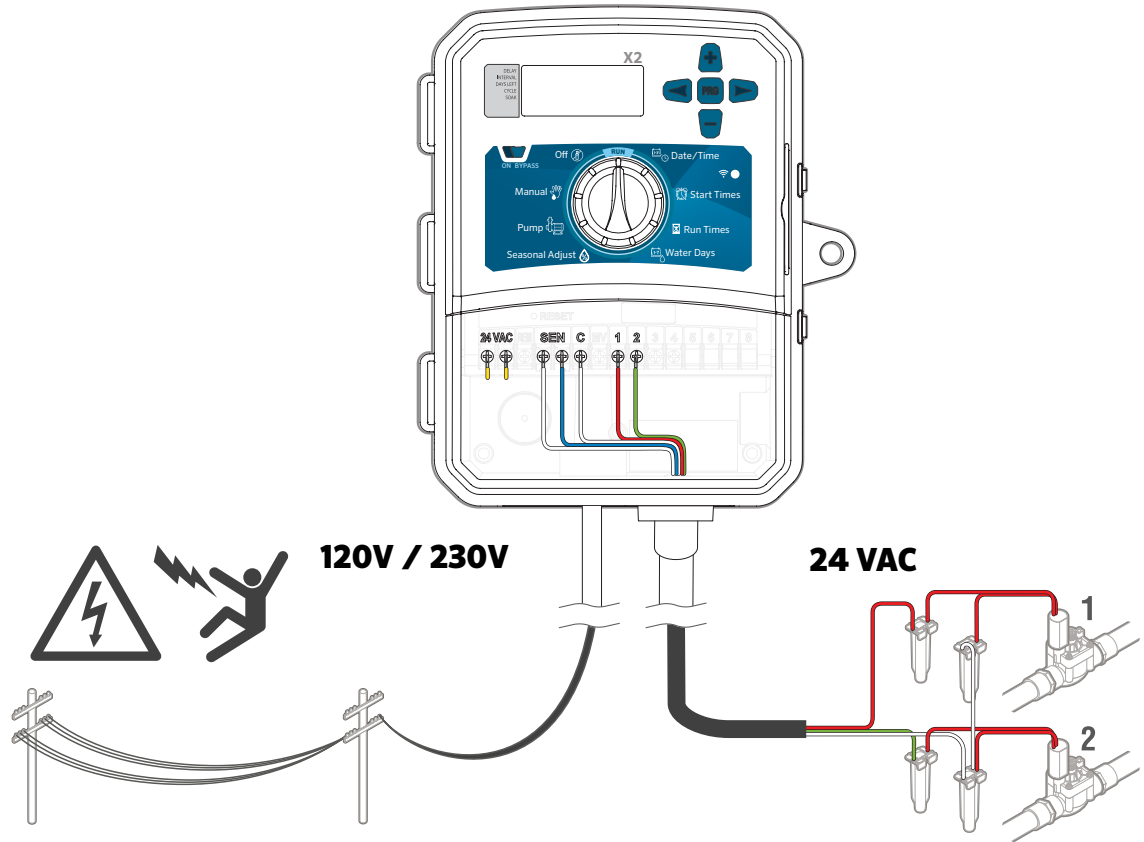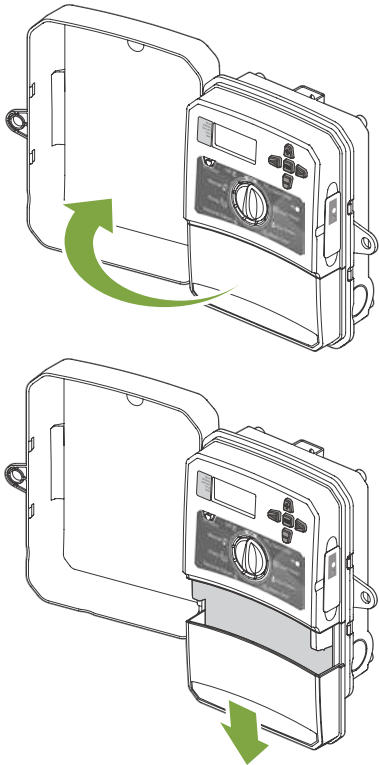

WAND FOR X2

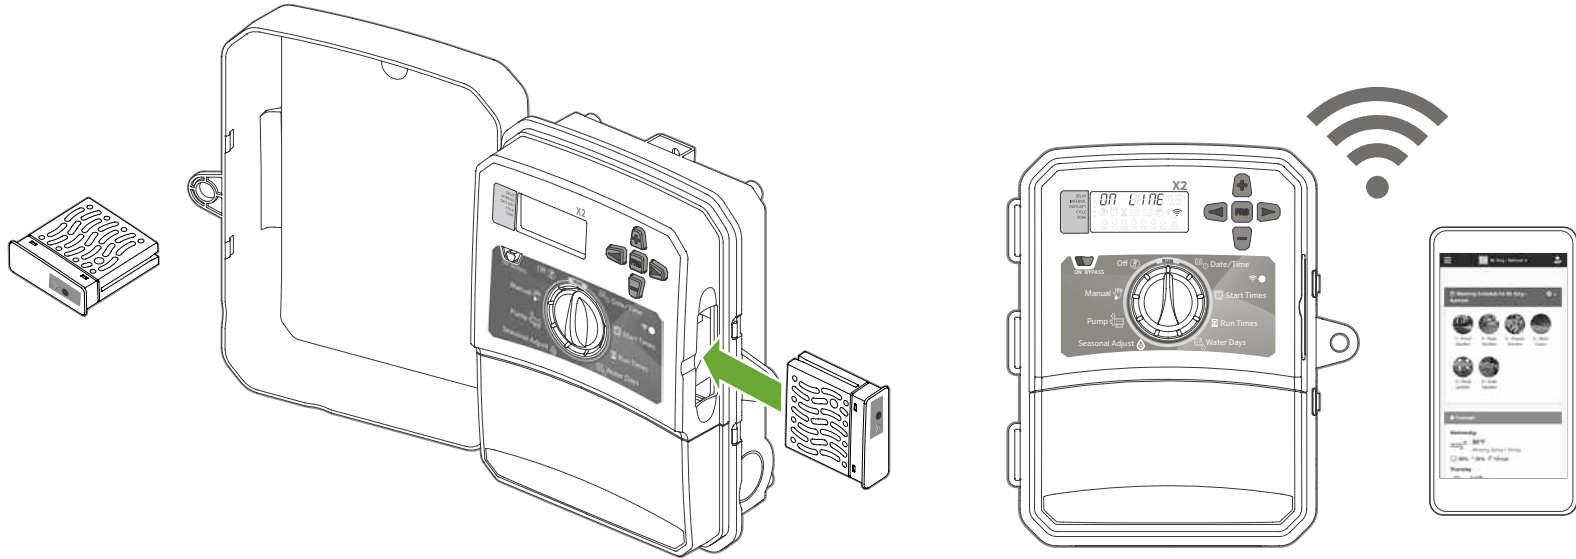

X2™ CONTROLLER WIRING DIAGRAM

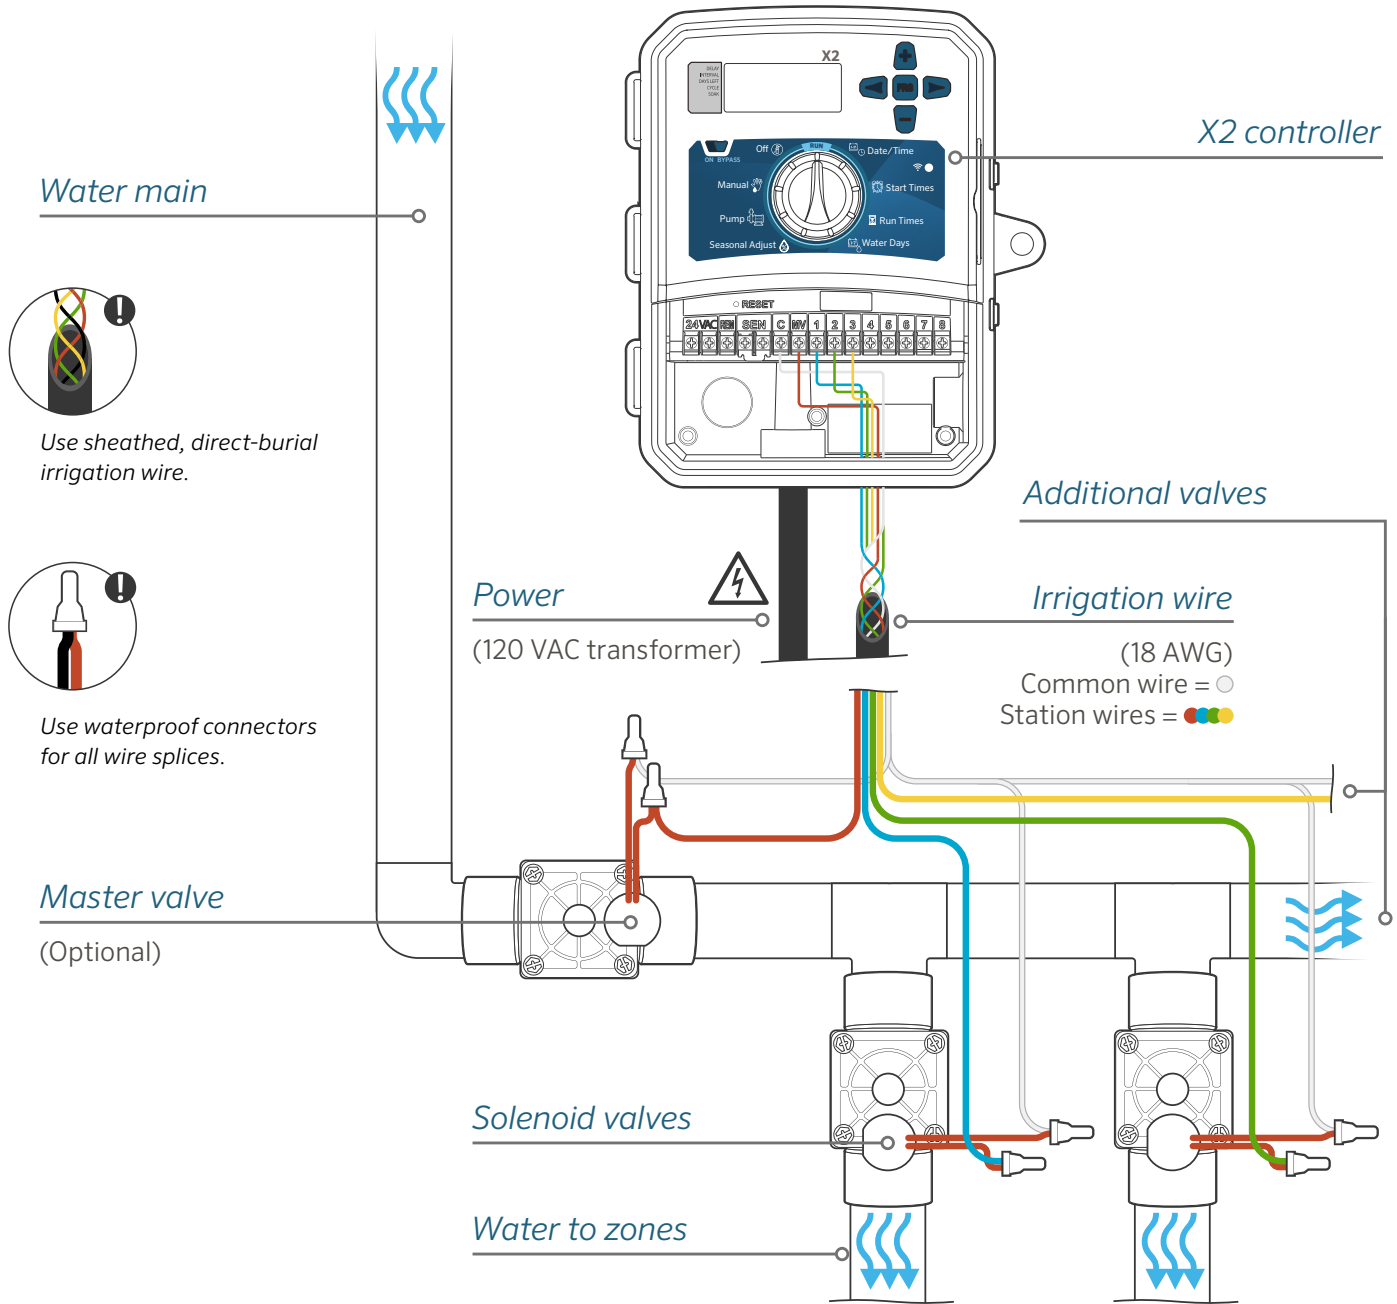

Troubleshooting

Need more helpful information on your product? Find tips on installation, controller programming, and more.



hunter.direct/x2help